STRIKE-FX4BT / STRIKE-FX6BT / STRIKE-FX12BT
Bluetooth Connection Example



1



1.Startup interface

1.2.Not Connected USB

2



1.3.Automatically displayed after a period

3



1.4.Bluetooth connection successful interface

2.1.Connected USB






MODE

Bluetooth flashing



2.2.When the MODE key is pressed to make the icon on the far left, rotate the encoder until the Bluetooth flashes, then press the encoder.

4

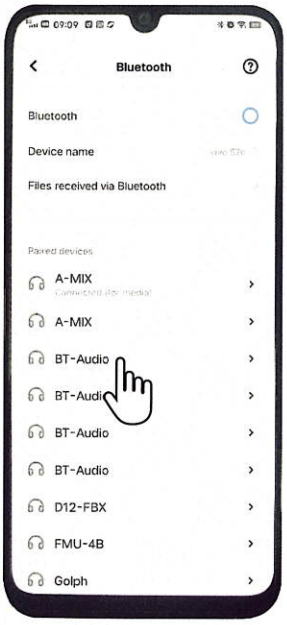

Enable Bluetooth on the mobile phone, select the device BT-Audio(Bluetooth name), and click BT-Audio to start the connection.